

# HOME DECORATORS


## *collection*

BF-24677 MSL FILE CABINET 31"H×21"W

INV#04645







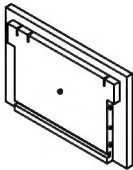





### ASSEMBLY INSTRUCTIONS

Made In China

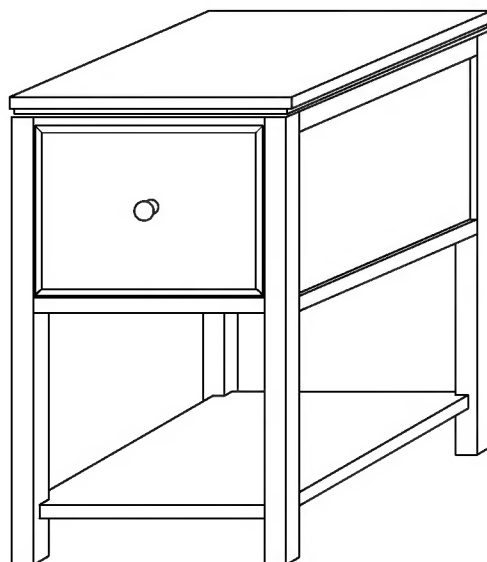


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

**IMPORTANT NOTE:** Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST		
<b>A</b>  TOP PANEL-1PC	<b>B</b>  RIGHT SIDE PANEL-1PC	<b>C</b>  LEFT SIDE PANEL-1PC
<b>D</b>  SHELF PANEL-1PC	<b>E</b>  ACROSS PANEL-1PC	<b>F</b>  BACK PANEL-1PC
<b>G</b>  DRAWER PANEL FRONT-1PC	<b>H</b>  RIGHT DRAWER SIDE PANEL-1PC	<b>I</b>  LEFT DRAWER SIDE PANEL-1PCS
<b>J</b>  DRAWER PANEL BACK-1PC	<b>K</b>  DRAWER PANEL BOTTOM-1PC	<b>L</b>  ADORNING PANEL-1PC

M



CAM-BOLTS-18PCS

N



KNOB-1PC

O




SCREWS-8PCS

P




SCREWS-4PCS

Q

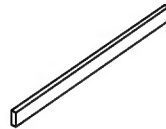

FILE HANGERS-2PCS

R

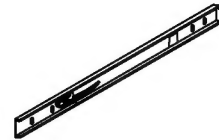


INNER SLIDES-2PCS

S



OUTER SLIDES-2PCS

T



ALLEN WRENCH-1PC

U



SCREWS-12PCS

V



DOWELS-4PCS

W



CAM-TOOL-1PC

X



CAM-LOCKS-18PCS

Y



SCREWS-2PCS

Z



SCREWS-1PC


A1



FEET-4PCS



NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

## HOW TO SEPARATE GLIDES

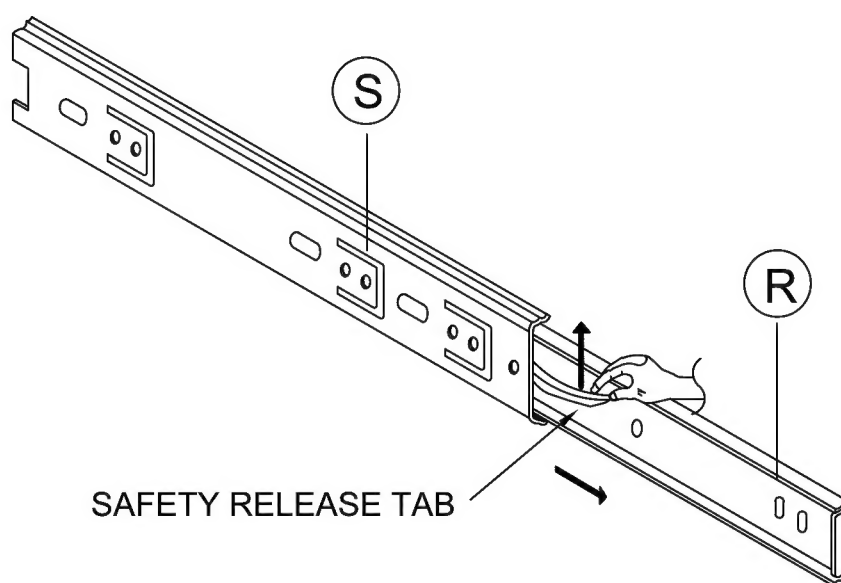



PRIOR TO ASSEMBLY, WE SUGGEST SEPARATING THE INNER GLIDES FROM THE OUTER-GLIDES, SIMPLY PULL THE LEFT/RIGHT INNER GLIDES FROM THE OUTER GLIDES EXPOSING A SMALL BLACK SAFELY RELEASE TAB, BY PUSHING THE SAFETY RELEASE TAB. YOU WILL BE ABLE TO SEPARATE THE GLIDE

NOTE: • UPON OPENING THOROUGHLY CLEAN ALL WOODS SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

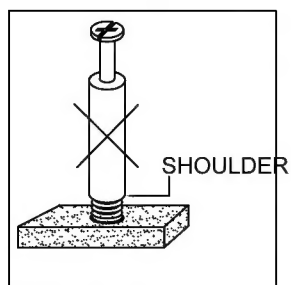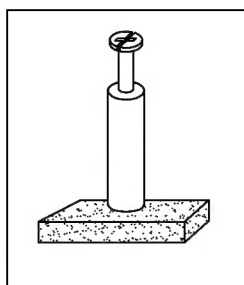


NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

## HOW TO USE THE CAM-TOOL

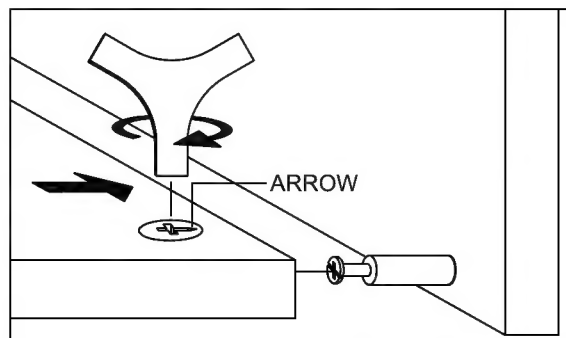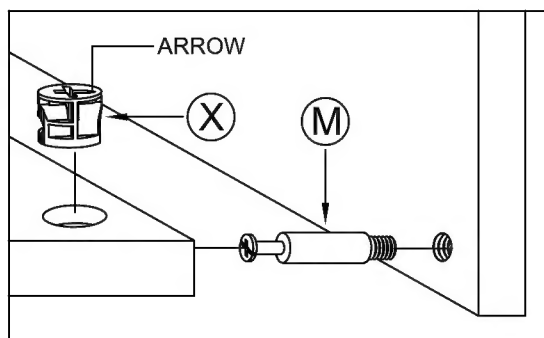


NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

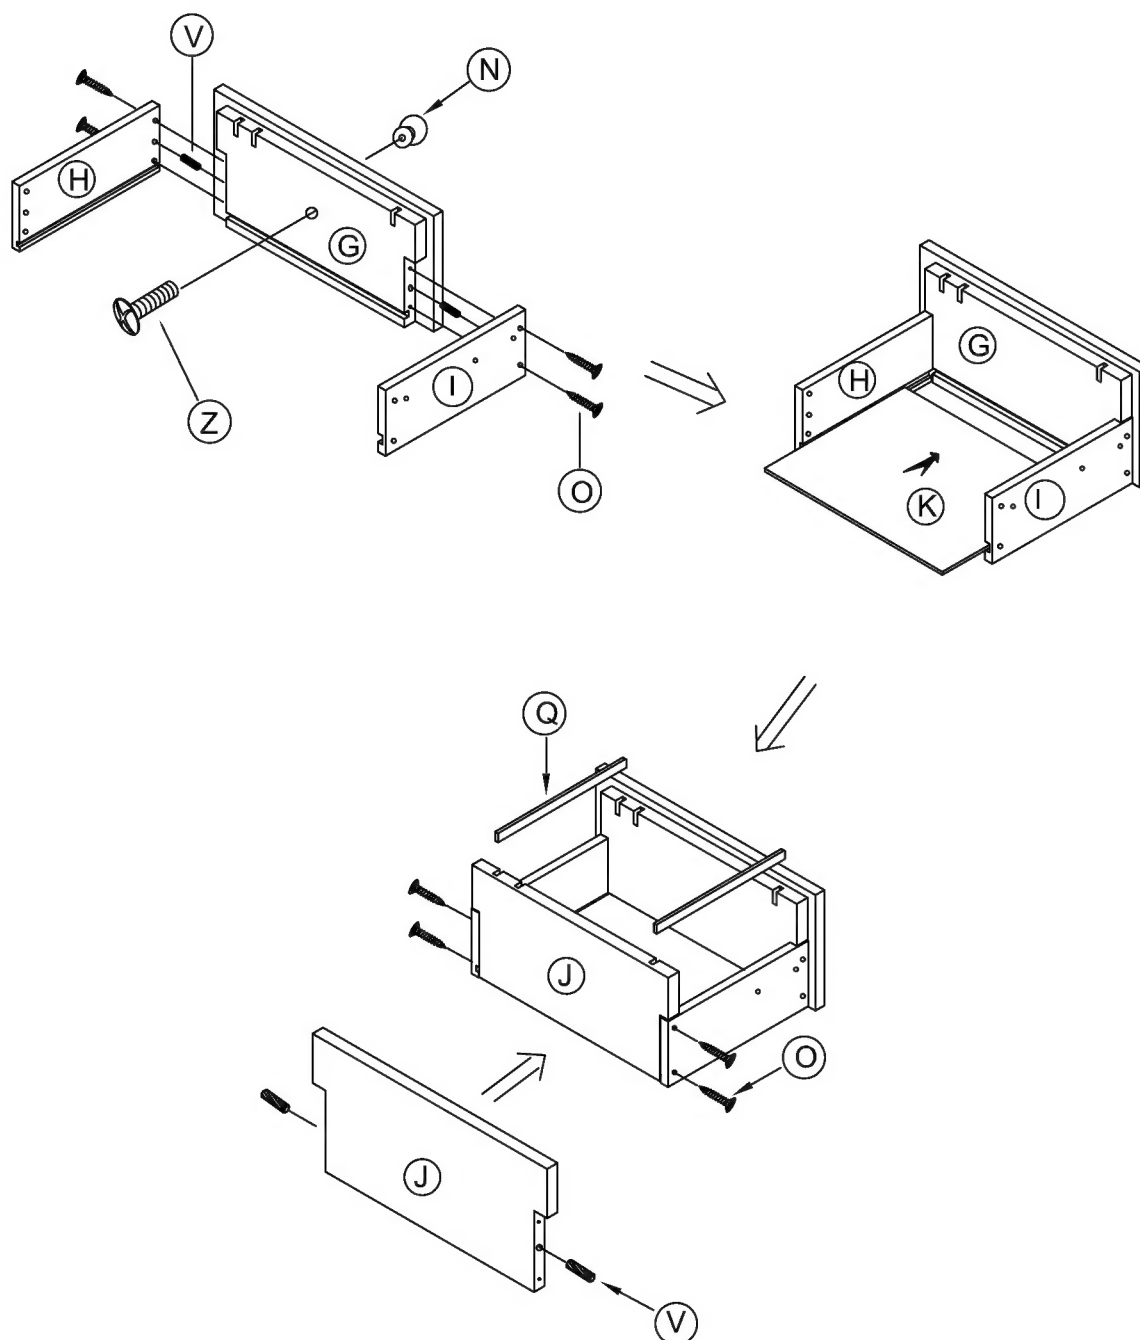

### 1) ASSEMBLE THE BIG DRAWER.


- INSERT 2 DOWELS(V) INTO THE HOLES IN THE PANEL(G) AND ATTACH SIDE PANEL(H/I) USING 4 SCREWS(O).
- ATTACH THE KNOB(N) TO DRAWER PANEL FRONT(G) USING ONE SCREW(Z).
- INSERT DRAWER PANEL BOTTOM(K) INTO THE SLOT IN THE DRAWER SIDE PANEL(I/H).
- INSERT THE 2 DOWELS(V) INTO THE HOLES IN THE DRAWER PANEL BACK(J) AND USING 4 SCREWS(O).
- INSERT THE FILE HANGER(Q) INTO THE CUT-OUT OF DRAWER PANEL FRONT&BACK.

ARROW FACES DRAWER FRONT

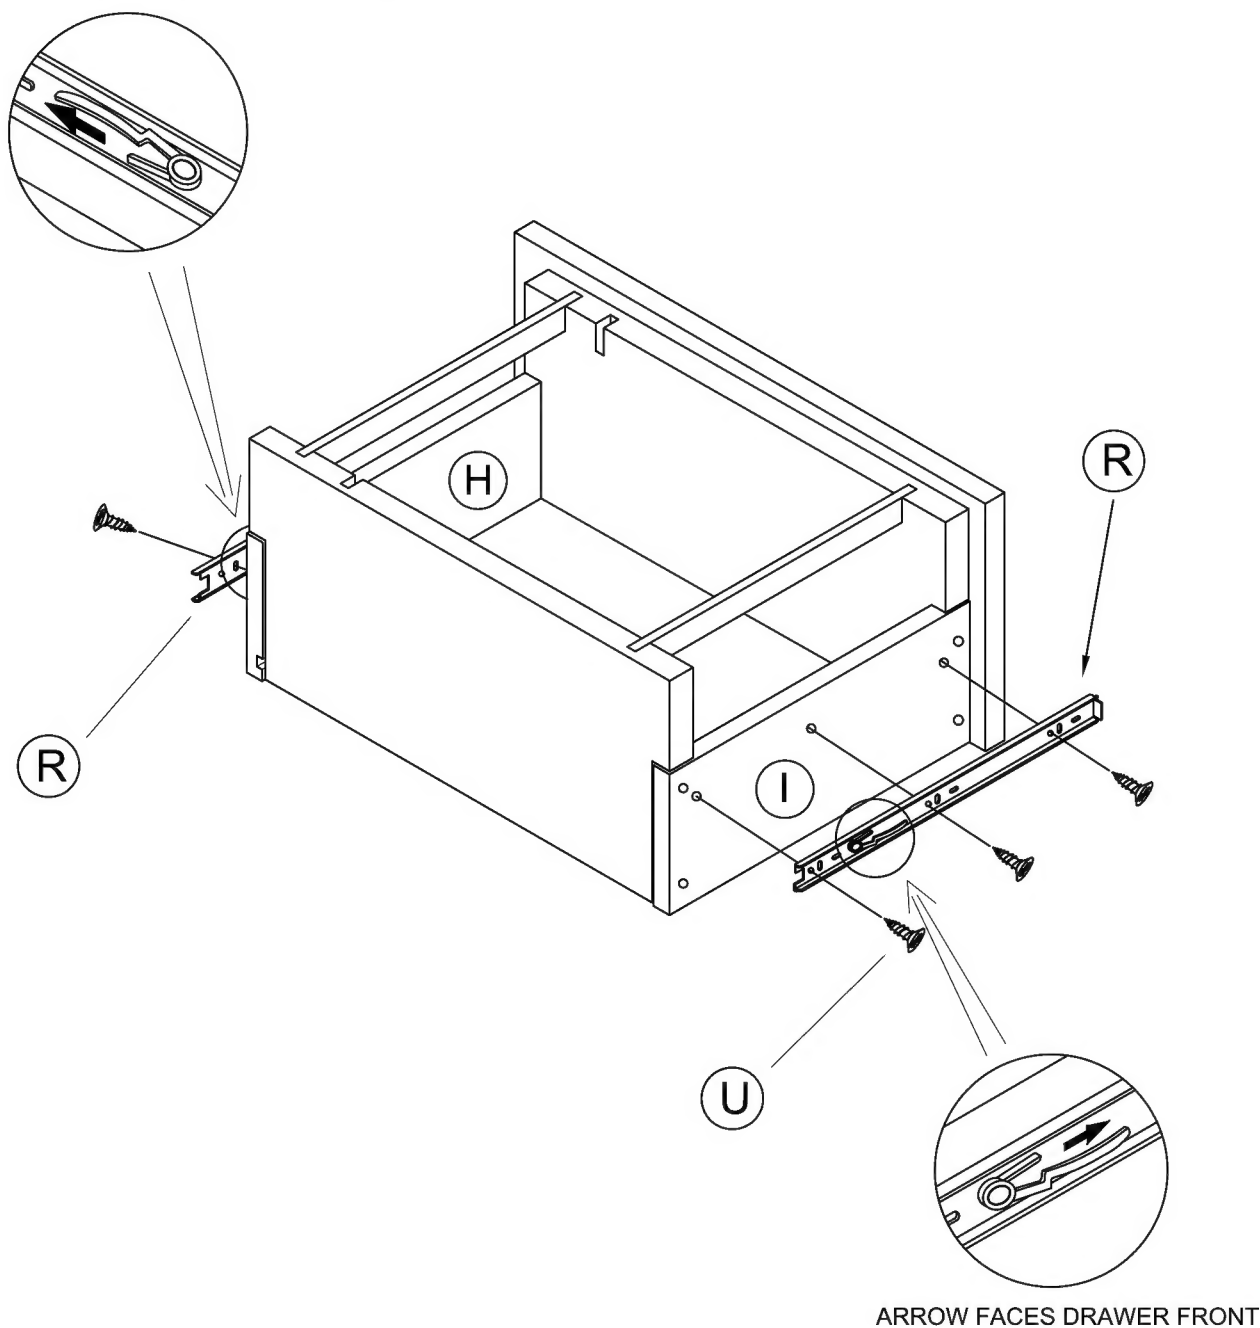

## 2 ) ASSEMBLE THE INNER SLIDES(R).


- ATTACH INNER SLIDES(R) TO DRAWER SIDE PANEL(I/H) USING 6 SCREWS(U).

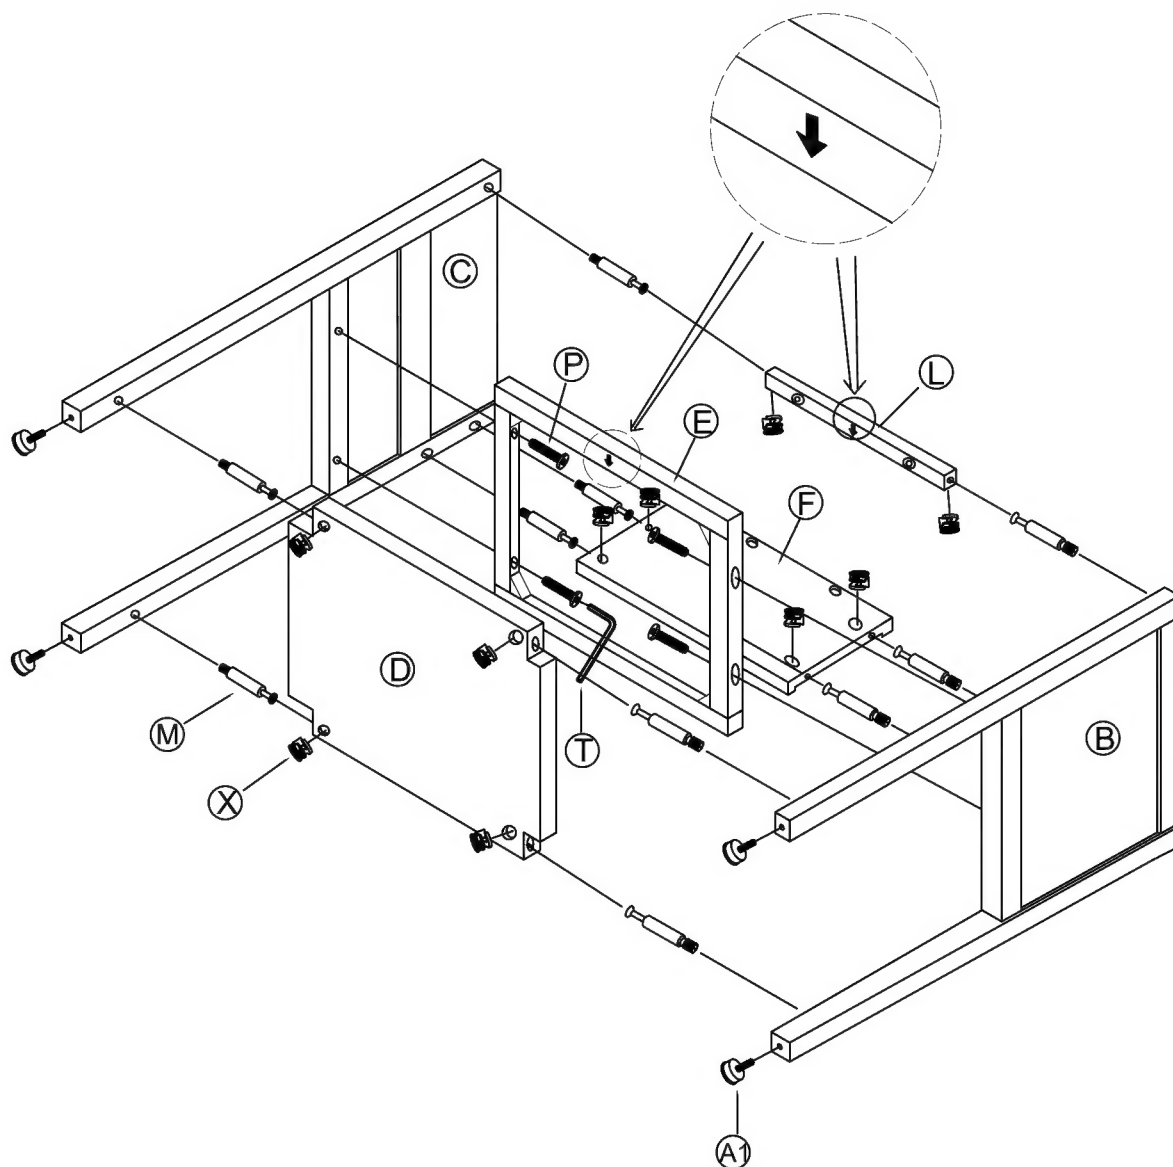

### 3). ASSEMBLE SIDE PANEL(B/C).


- ROTATE THE 10 CAM-BOLTS(M) INTO THE HOLES IN THE SIDE PANEL(B/C).
- PLACE CAM-BOLTS(M) INTO THE HOLES IN THE PANEL(D/F/L) AND ATTACH USING 10 CAM-LOCKS(X).
- ATTACH ACROSS PANEL(E) TO SIDE PANEL(B/C) USING 4 SCREWS(P).
- FINALLY, ROTATE THE 4 FEET(A1) INTO THE HOLES IN THE SIDE PANEL(B/C).



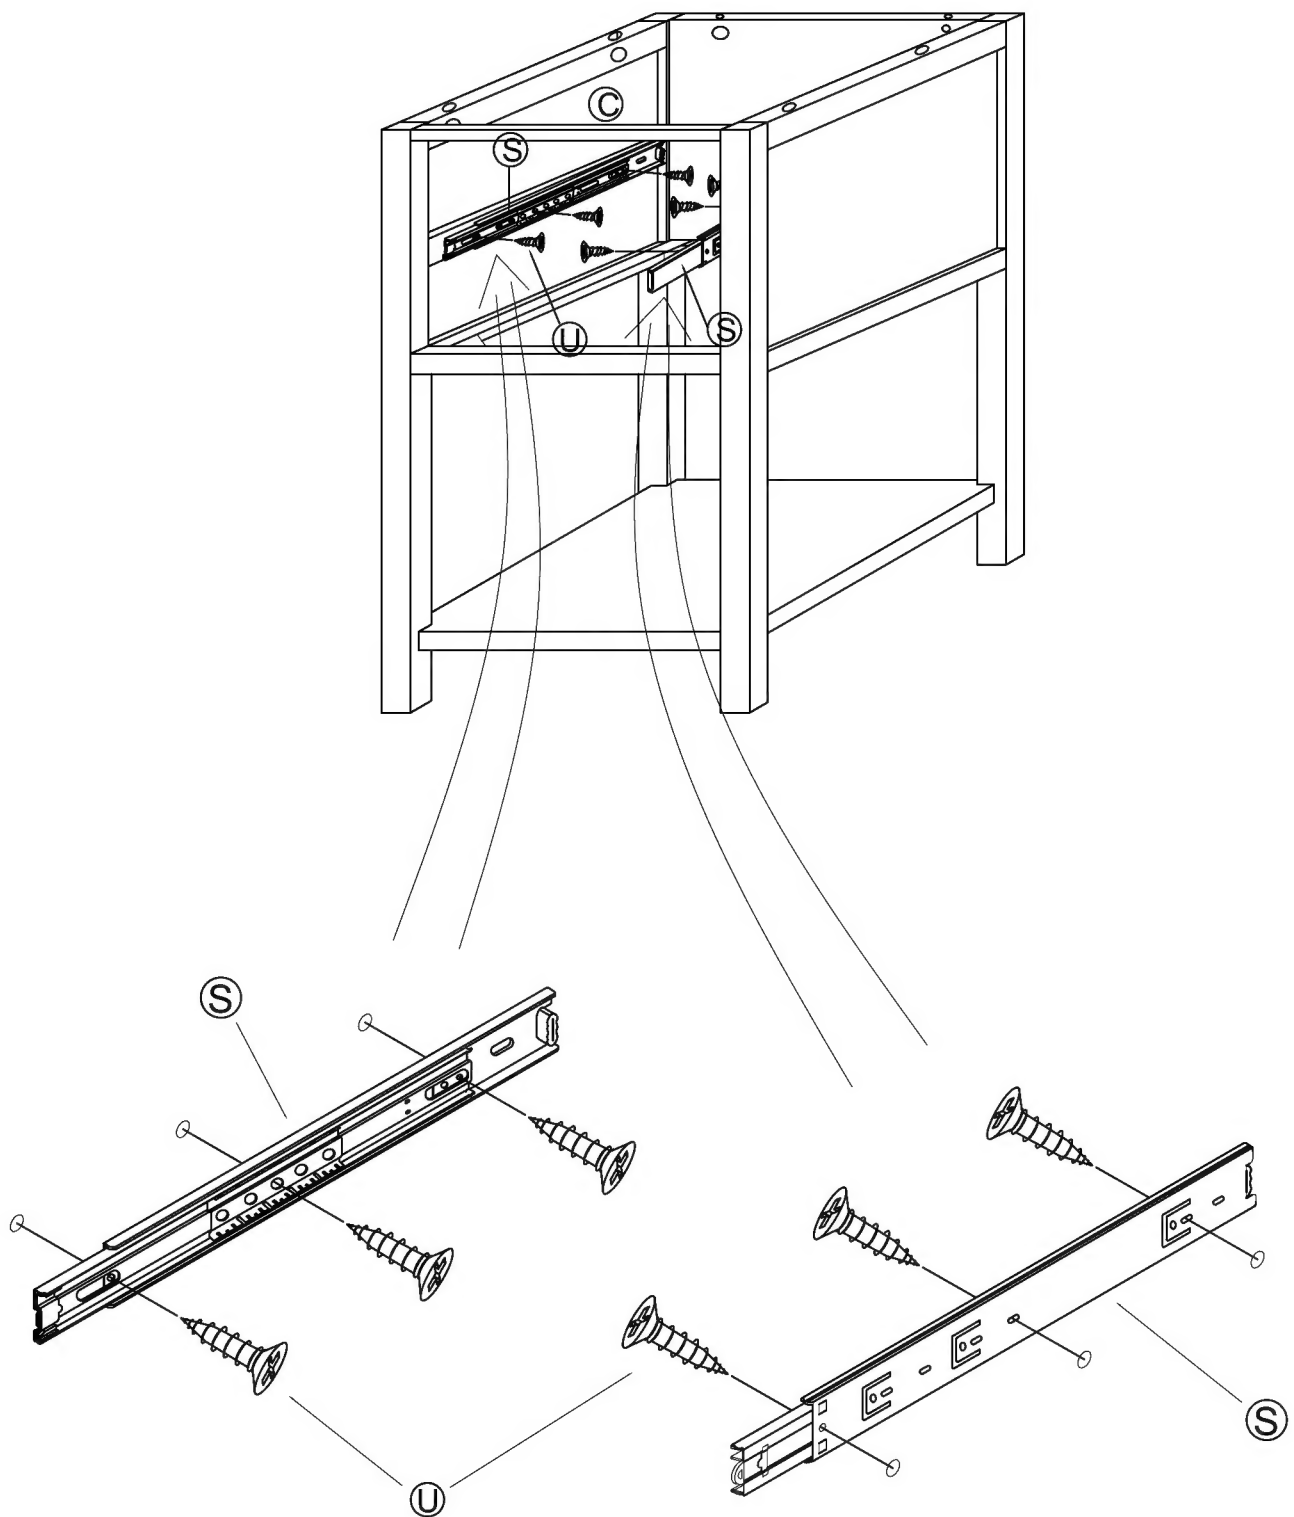


#### 4). ASSEMBLE OUTER SLIDES(S).

- ATTACH THE OUTER SLIDES(S) TO SIDE PANEL(B/C) USING 6 SCREWS(U).

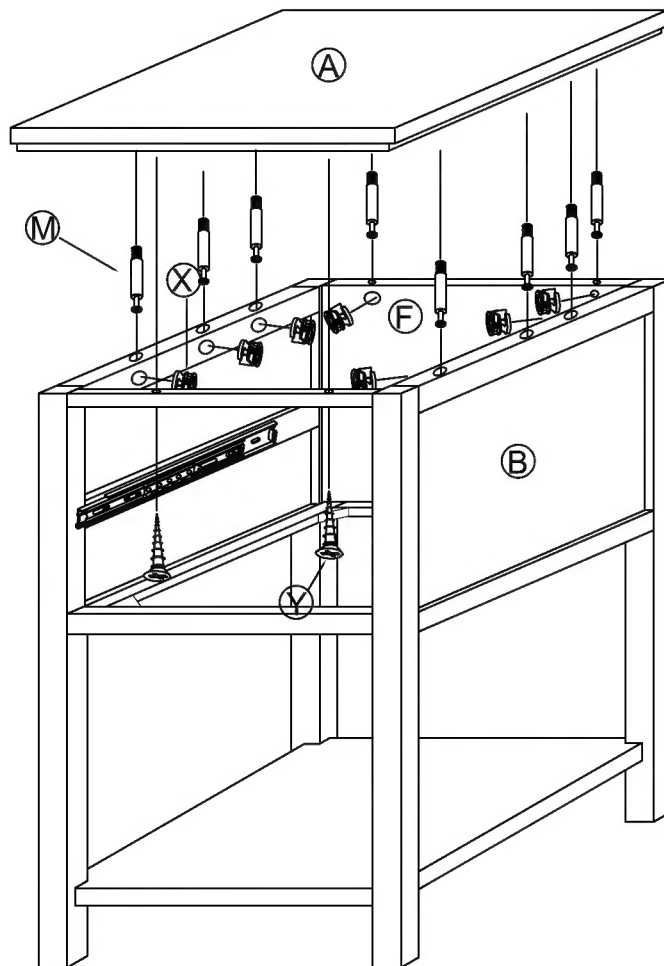

#### 5). ASSEMBLE TOP PANEL(A).

- ROTATE THE 8 CAM-BOLTS(M) INTO THE HOLES IN THE TOP PANEL(A).
- PLACE CAM-BOLTS(M) INTO THE HOLES IN THE PANEL(B/C/F) AND ATTACH USING 8 CAM-LOCKS(X).
- ROTATE THE 2 SCREWS(Y) INTO THE HOLES IN THE ADORNING PANEL(L).

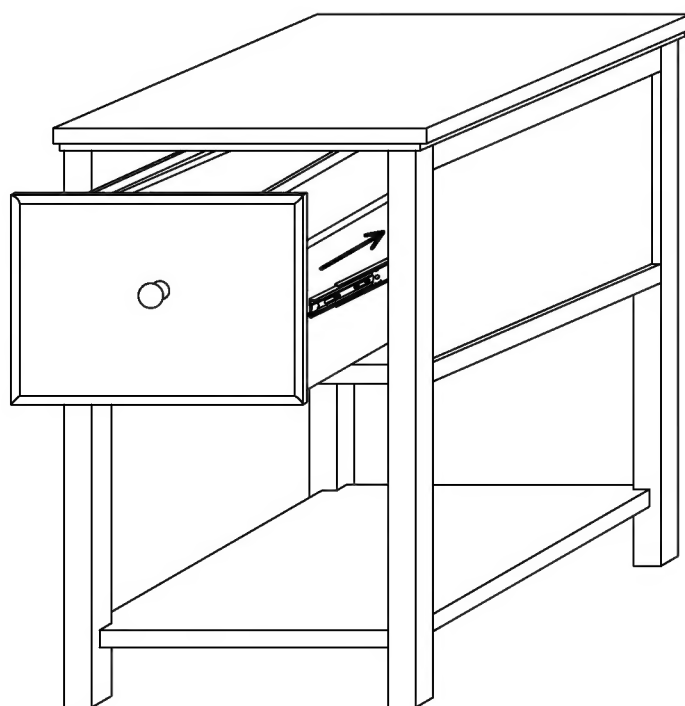

6). ASSEMBLE THE DRAWER.

- INSERT THE DRAWER INTO THE SLIDERS.